


⚠ WARNING

These units should be operated only by authorized adults who have read and understand these operating instructions. Movement and/or operation of these tables by children could result in serious injury! It is dangerous to leave children unattended in the area of folded tables. If necessary to replace or repair leg assembly, contact Palmer Hamilton. Center legs contain springs under compression that may be hazardous and could result in serious injury if released without following proper procedures. Do not sit or stand on tabletops. Do not stand on benches.


RELEASING BENCHES FROM STORED POSITION

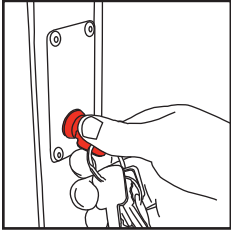


STEP 1
Insert and turn key to disengage mullion locks. This unlocks table and bench units to be released.



STEP 2
Using the lock release handle, with one hand on the upper portion of the bench, disengage the release latch and pull the bench unit to a slightly open position.

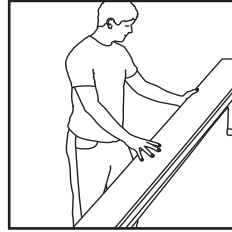


STEP 3
Step to the side and guide the bench into the "teepee" position (compression spring will prevent bench from dropping to the floor).

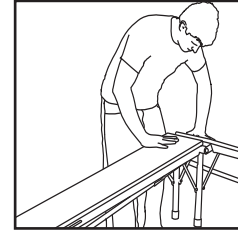

STEP 4
If the bench is to remain attached to the pocket, push bench down into fully open and locked position. Lift to test that bench is securely locked.


RELEASING TABLES FROM STORED POSITION

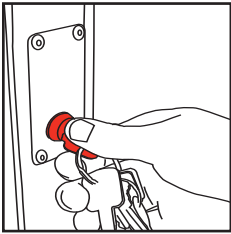


STEP 1
Insert and turn key to disengage mullion locks. This unlocks table and bench units to be released.



STEP 2
Using the hook side of the lock release handle, with one hand on the upper portion of the table, disengage the release latch and pull the table unit to a slightly open position.


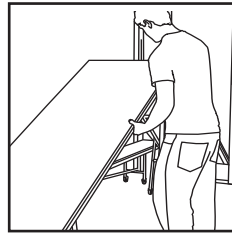


STEP 3
Step to the side and guide the table into the "teepee" position (compression spring will prevent table from dropping to the floor).

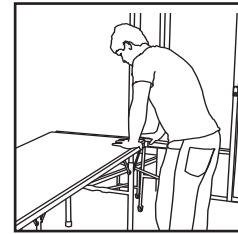


STEP 4
If the table is to remain attached to the pocket, push table down into the fully open and locked position. Lift to test that table is securely locked.

REMOVING TABLE OR BENCH FROM WALL POCKET

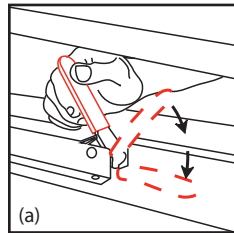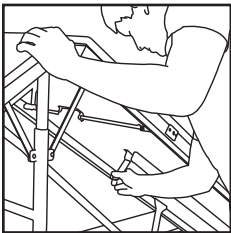


From the teepee position with both End Legs touching the floor (Step 3 above), reach under table or bench, grasp red Track-Lock™ handle (a) and rotate away from tabletop to Track-Lock™. Then roll unit away from wall pocket. Continue with Step 4 above.

TO ADJUST THE DOWN LATCH

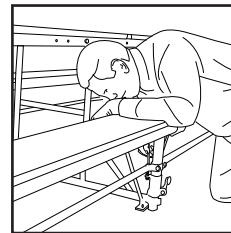

STEP 1
Apply your body weight onto the bench until the center bench leg touches the ground, continue applying pressure while completing Step 2.

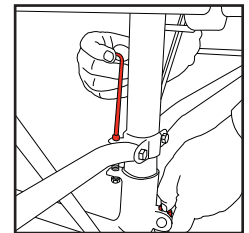


STEP 2
Use an allen wrench to tighten the adjusting screw until the down latch cannot be released by hand. Then back-off 1/8" turn.


WALL POCKET SYSTEMS TABLES AND BENCHES

operating instructions


RETURNING TABLE OR BENCH TO WALL POCKET

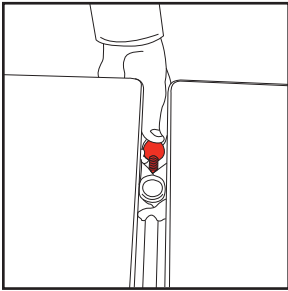


STEP 1
Release down lock and raise table/bench to a comfortable walking height.

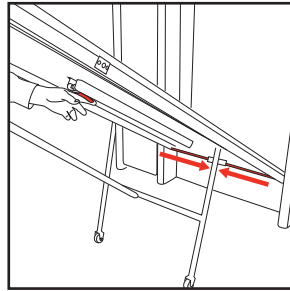

STEP 2
Make sure Track-Lock® pins are retracted prior to moving table/bench into pocket.

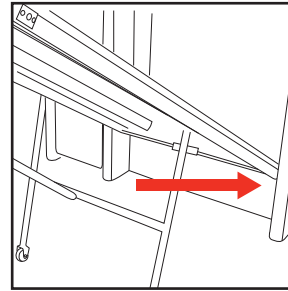


STEP 3
Walk table/bench towards wall pocket - gently steer table/bench into proper alignment with table/bench opening in the storage pocket to prevent damage to table/bench top and wall pocket.

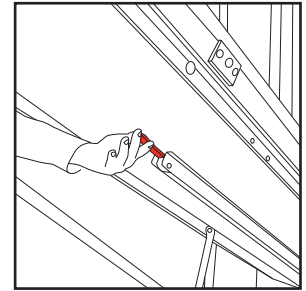


STEP 4
When in pocket, move Track-Lock handle to insert Track-Lock® pins into track pocket. **Note:** Lever must be flat against top to ensure both pins are securely locked in position.

RETURNING TABLE OR BENCH TO WALL POCKET

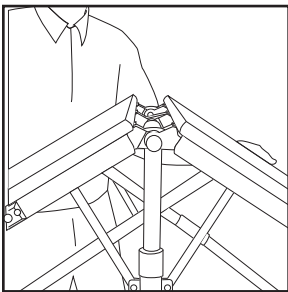


STEP 5
Standing at the center of table/bench, raise table/bench.

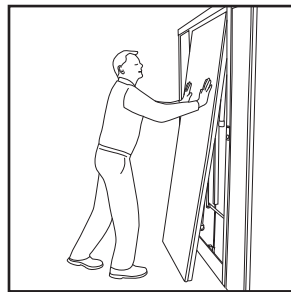

STEP 6
When partially raised, move to center of table/bench and slowly push the table/bench straight into the cabinet so that the table/bench travels squarely into wall pocket.



STEP 7
When inner leaf is fully against rear of the wall pocket, continue to push outer top (leaf) into vertical storage position. This will automatically engage the intermediate Track-Lock®, the Z-Lock and the bottom safety catch.

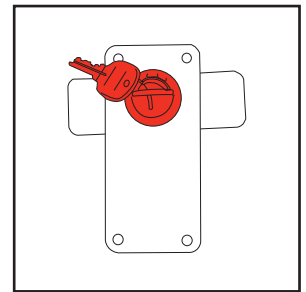

STEP 8
Finally, when all tables/benches are in position, insert key into mullion lock and engage lock for totally safe and tamper-proof storage.



Customer Service 800-788-1028

As part of Palmer Hamilton's on-going commitment to quality, product specifications, changes, or modifications may be made without prior notice. **Warranty:** PALMER HAMILTON warrants that its products shall be free from defects in original material and workmanship for a period of fifteen years from the original shipment date. This warranty shall not apply to normal wear and tear or in the event products are damaged as a result of misuse, abuse, vandalism, neglect, accident, improper application, and modification or repair by persons not authorized by PALMER HAMILTON. The company will, at its discretion, repair or replace any defects. Any repair or replacement must be approved in advance by the factory before any action is taken. There are no implied warranties of fitness or merchantability, and there are no other express warranties beyond the warranties expressed here. 12/2011